


### Electronic Receiver Wireless

The EvenAir® electronic receiver module plugs into the H32 Wiring Hub and is required when using the TSER wireless, battery powered temperature sensor. The ER1 monitors the sensor and whenever the sensor temperature changes one degree, the new temperature is wirelessly sent to the Wiring Hub.

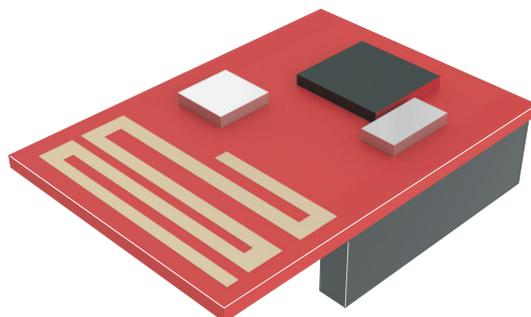

- Eliminates wiring from the Wiring Hub to the sleeping area sensor for easy installation.
- Plugs into the H32 circuit board.
- Range is approximately 100-foot within a home.
- FCC certified for ISM 916 MHZ band.
- Size - .70 in. x 1.10 in. x 0.40 in.
- Four-byte security ID prevents interaction with other devices.
- Optional Home Address set in the thermostat allows multiple users within 300 feet.
- 5-Year Warranty.

### Ordering Information

Model #	Description	Compatible Wiring Hubs
Model ER1	Electronic Receiver Module. Required when using wireless sensor, Model TSER.	H32



