

--- New wire supplied by installer

⌘ Solderless connector (wire nut)

L1 is 120V

N is 120V Neutral

M is 120V if the motor is running

T1 is 120V if there is a call for heat

T2 is 120V Neutral

T3 is 120V if there is a call for heat

To furnace limit or boiler control

