MODEL SWG SERIES EXTENSION KITS INSTALLATION INSTRUCTIONS

- 1. Remove the End Pan from the SWG Venter (See Figure 1)
- Using a pair of sheet metal cutters, cut the Damper Plate Adjustment Bracket. (See Figure 2) Then remove the Damper Plate and Adjustment Bracket.

NOTE: The Extension Kit can be added onto the SWG Venter directly or by attaching equal lengths of inner and outer pipes, then the Extension Kit can be added closer to the heating unit.

3. Install the Extension by starting the inner pipe into the attaching section first, then lightly tap the end of the inner an outer pipe into the attaching section until the rib on the crimped end touches the attaching pipe. (See Figure 3)

NOTE: The lock seam of the pipe should be on the top of the pipe.

4. Make sure damper plate rotates freely, then fasten the outer pipe with at least three sheet metal screws.



2308 Airport Road Kinston, NC 28501

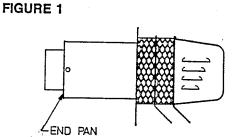
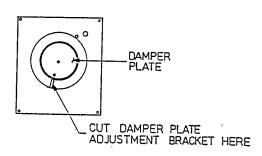


FIGURE 2



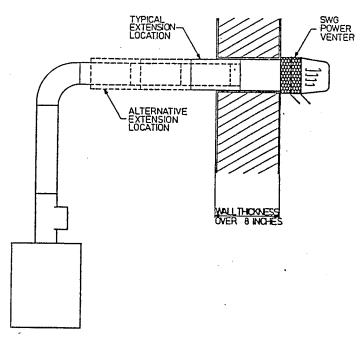


FIGURE 3

